

Dual Button Remote (P220-2KA) Triple Button Remote (P220-3K)

- 1) Open the battery cover of your remotes. Inside dual and triple button remotes you will find **8** dipswitches. On your receiver or other single button remotes you will find **9** dipswitches.
- 2) Set the **8** dipswitches of your **dual** or **triple** button remotes the same as the **first 8** on **all single** button remotes being used and **all receivers** being used.

For the **dual button remotes:**

For the gate or garage door you wish to operate with the **Left button** set the **9th** dip-switch on the receiver to **+** (**positive or UP**) as well as any single button remotes for that gate or garage door..

For the gate or garage door you wish to operate with the **Right button** set the **9th** dip-switch on the receiver to **0** (**neutral or center**) as well as any single button remotes for that gate or garage door..

For the **triple button remotes:**

For the gate or garage door you wish to operate with the **Left button** set the **9th** dip-switch on the receiver to **+** (**positive or UP**) as well as any single button remotes for that gate or garage door..

For the gate or garage door you wish to operate with the **Center button** set the **9th** dip-switch on the receiver to **0** (**neutral or center**) as well as any single button remotes for that gate or garage door..

For the gate or garage door you wish to operate with the **Right button** set the **9th** dip-switch on the receiver to **-** (**negative or DOWN**) as well as any single button remotes for that gate or garage door..