

# SIMPLE ENTRY CODE PROGRAMING- GateCrafters Stainless Steel Keypad (WKP-P)

1

2

3

4

Enter default master code—this code does not open the gate ever and is not necessary to change  
Light will flash **orange** while pressing buttons

○

Press programming button (lower left corner)  
Light will turn **green**

1

0

1

Enter the user slot number, you can have up to 60 users. Slot numbers go from '01' to '60'

?

?

?

?

Enter a four digit user code of your choice.  
Example '1538'

○

Press programming button (lower left corner)  
Light will turn **off**

**Diagnostic Note:** If light flashes green 3 times, there was an error. Start again from the beginning and try to press the buttons more deliberately and move quicker through the sequence.

# Wired or Wireless- GateCrafters Stainless Steel Keypad (WKP-P)

## Wired:

**GND** - Connect to the common on your gate opener control board using 20 gauge stranded wire. *If using a 12VDC power source with to power the keypad instead of the batteries connect the negative of the 12VDC power source to this terminal as well.*

**12V** - Optional - Connect to the positive a 12VDC power source

**N/O** - Connect to the cycle terminal of your gate opener. This terminal should be the same terminal you would connect a push button to.

Move the “J” jumper on the lower left to J0

## Wireless:

Match the 9 dip switches in the keypad to the 9 dipswitches of a functioning remote—  
NOTE this only works with 318 MHz receivers.

Move the “J” jumper on the lower left to J1.

## Resetting:

Remove all 4 batteries or 12V power source.

Hold down 3, 6, 9.

Reinsert the batteries while still holding the numbers.

Release the numbers after power is restored to the keypad.